

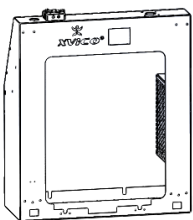
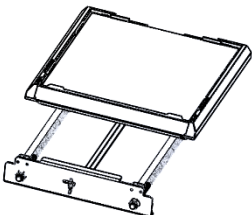
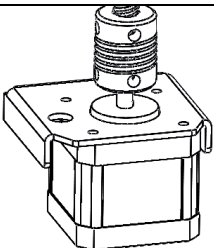
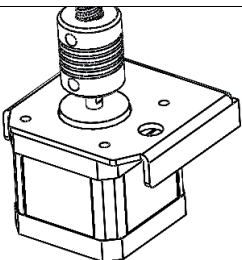
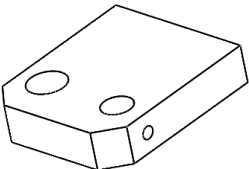
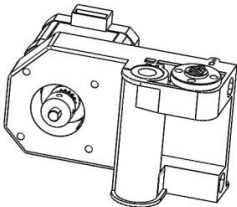
Xvico printer X1

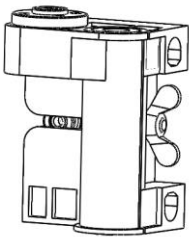
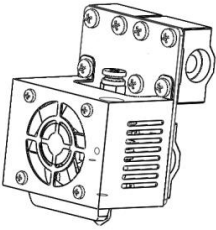
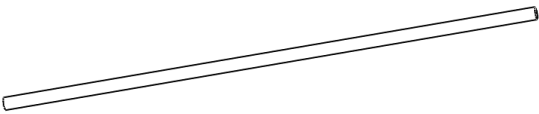


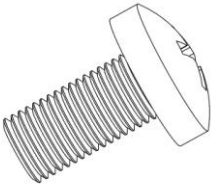

Introduction

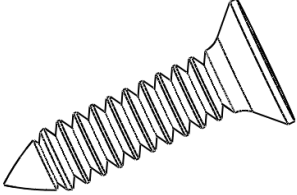
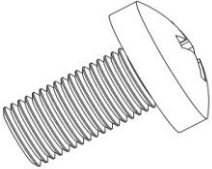
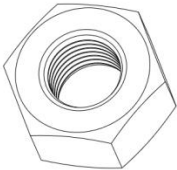
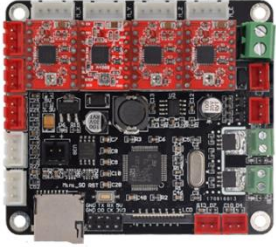
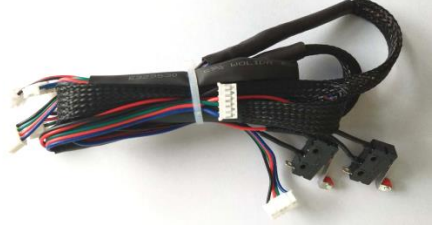

Please combine this code book with the physical and assembly instructions to help you assemble your machine X1 better and faster.



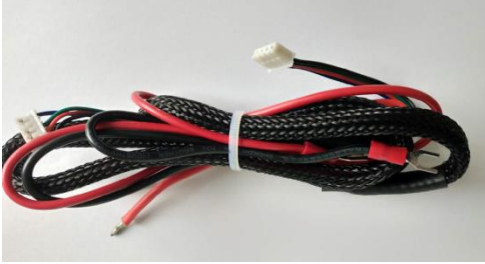
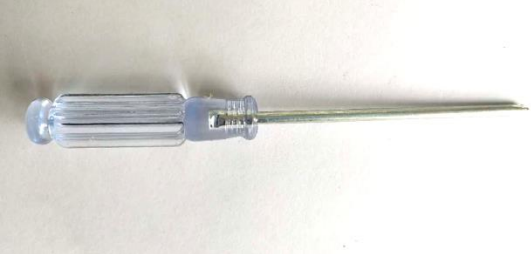


This codebook is a complete bill of materials, combined with text and forms, making it easier and faster to find parts. (Note: The picture only represents the outline of the object. It does not represent the actual object. It is for reference only.)

XVICO 3D Printer X1 Parts list

Spare parts diagram	Code	Number
	A1 (Main frame)	1
	A2 (Print platform components)	1
	A3 (Left Z axis motor)	1
	A4 (Right Z axis motor)	1
	A5 (Z axis fixed plate)	2
	A6 (X axis motor)	1

	<p>A7 (X axis belt bearing support)</p>	<p>1</p>
	<p>A8 (Extruder)</p>	<p>1</p>
	<p>A9 (Guide rod)</p>	<p>4</p>
	<p>A10 (Threaded rod)</p>	<p>2</p>
	<p>A11 (Filament Suspension bar)</p>	<p>1</p>
	<p>A12 (M4*8 Screw)</p>	<p>12</p>
	<p>A13 (M2.5*10 Screw)</p>	<p>4</p>

	<p>A14 (M2.3*10 Screw)</p>	<p>4</p>
	<p>A15 (M3*4 Screw)</p>	<p>10</p>
	<p>A16 (M8 Nut)</p>	<p>4</p>
	<p>B1 (Mainboard)</p>	<p>1</p>
	<p>B2 (B2-1: X axis Limit switch wire) (B2-2: Z axis Limit switch wire) (B2-3: E Motor wire)</p>	<p>1</p>
	<p>B3 (Screen ribbon cable)</p>	<p></p>

	<p>B4 (Power line)</p>	<p>1</p>
	<p>B5 (TF card and card reader)</p>	<p>1</p>
	<p>B6 (Mainboard power line)</p>	<p>1</p>
	<p>C1 (Screwdriver)</p>	<p>1</p>
	<p>C2 (C2-1: 1.5mm Hex wrench) (C2-2: 2mm Hex wrench) (C2-3: 2.5mm Hex wrench) (C2-4: 10-14 Open spanner) (C2-5: Screwdriver)</p>	<p>1</p>
	<p>C3 (Feeding pipe)</p>	<p>1</p>